









ボタン	機能	操作方法
ON/OFF/ TIME  	オン	<b>一回押し</b> 電源オン
	オフ	<b>二回押し</b> 電源オフ
	スタート/ストップ /タイマーリセット	計量中 - <b>短く押し</b> タイマーのスタート / ストップ - <b>2秒間長押し</b> タイマーのリセット 最大計測時間：99分59秒
	確認	設定モード中 - <b>短く押し</b> 選択を確定

ボタン	機能	操作方法
TARE  	表示をゼロにする	計量中 - <b>一回押し</b> 表示している重量をゼロにする
	表示切替	<b>二回押し</b> "g"から"oz"に表示を切り替える
	モード切替	<b>2秒間長押し</b> 抽出モードを1つずつ切り替える  A. フルマニュアルモード B. オートテア + マニュアルタイミングモード ◊ C. オートテア + タイマーディスプレイなし ◊ D. オートテア + オートタイミングモード ◊△
	設定モード	計量ゼロの状態、 <b>6回以上押し</b> と設定モードになり、ユーザー校正と自動シャットダウン時間を設定することができます。

**機能ご案内と手順:**

**スケールの電源オン**：スケールの電源をオン/オフするには、本体の背面、USB-C充電ポートの横にあるスイッチを使用します。


**A. フルマニュアルモード：**

このモードでは、タイマー、手動計量、テアなどの操作を手動で行うことができます。

**B. オートテア + マニュアルタイミングモード：**

このモードでは、水滴マークが点灯、自動重量ゼロ機能がオンとなり、また手動でタイマーを操作することができます。

載せた容器の重量をゼロにした後、水流を検知して計量を開始します。水流が止まると、最終的な重量を表示します。

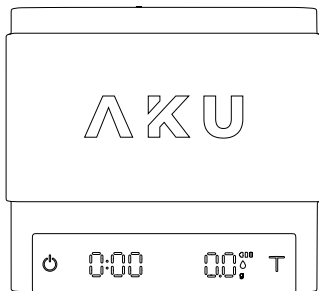


# AKU

## C. オートテア + タイマーディスプレイなし :

このモードでは、タイマーは表示されず、重量のみが表示され、水滴マークが点灯します。これは自動重量ゼロ機能が有効であることを意味します。


容器が置かれ、重量が安定した後、自動的に重量がゼロになります。連続した水流が検出されたときのみ、計量を開始することができます。水流が止まると、現在の重量を表示することができます。

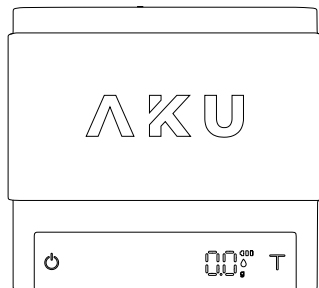

## D. オートテア + オートタイミングモード :


このモードでは、水滴マークと三角形のマークが両方表示されます。これは、自動重量ゼロ機能と自動タイマー機能が作動していることを知らせるものです。

容器が置かれて安定した後、重量は自動的にゼロにセットされます。水流が検出されると、タイマーは自動的に計時を開始します。水流が止まると、タイマーも停止します。

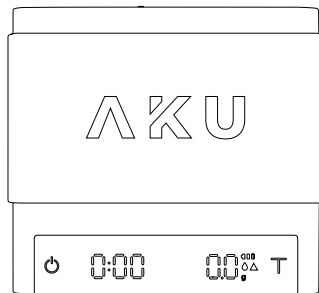

**設定モード:**

このモードでは、100g校正、自動停止時間（スリープ）の設定ができます。





※AKUスケールの設定を行うには、スケールが水平で安定した場所に置かれていること、モードAになっていること、グラムに設定されていること、スケールがゼロになっていることを確認してください。

**A. 100g calibration:**


AKUスケールを校正するには、スケールが水平で安定した場所に置かれていることを確認し、テアボタンを押し、スケールをゼロにします。

1. テアボタンを6回連続で押すと、画面に下記イラストの様な文字が表示されます。





## A. 100g 校正にすすむ：

2. 次に、電源ボタンを1回押すと、画面に「CEL」と「1000.0g」が表示されます。テアボタンを押すと、最大容量の設定が1000g、2000g、3000gに切り替わります。




3. Once you have selected the maximum capacity you wish to use, press the power button once and "c-zero" will flash after the calibration mode has been enabled and then the display will show "PUT 100g".



4. Place the 100g calibration weight in the centre of the scale.



5. When "PASS" is displayed on the screen, the calibration procedure has been successful.







**B. Sleep timer setting:**

1. Press the tare key 6 times in a row and you will see the following displayed on the screen.




2. At this time, press the tare key to cycle the sleep timer options between 5,10,20,30,60 or OFF.



*continued over*

## B. Sleep timer setting continued:

- To save this setting press and hold the power button until the following is displayed on the screen.



### Charging

- To charge the AKU Scale, plug the USB-C cable into the port located on the back of the scale body and next to the on/off switch.
- When charging, the weighing function cannot be used.

### Battery level display:

When the battery symbol is fully displayed (three sections)



the battery charge is above 80%.

When the battery symbol shows two sections,



the battery charge is 50% - 80%.

**Battery level display** continued:

When the battery symbol displays one section,




**the battery charge is less than 50%.**  
The battery is

When "Lo" is-displayed on the screen,



**battery is empty and must be charged.**

charging when the three battery symbols flash in sequence from right to left.



**When charging, the weighing function cannot be used.**

When the battery is fully charged, all battery symbols flash at the same time.



### **Warranty:**

For 12 months after the original date of consumer purchase, Varia Brewing Limited warrants this product against any defects caused by defective material or workmanship.

Only the original user is covered by this warranty when a AKU Electronic Scale is purchased from an authorized reseller, and when is fitted with the factory standard parts.

To make a warranty claim, you will need the original sales receipt as proof of purchase.

This warranty does not cover damage to the product caused by the following:

- An accident, misuse, neglect or 'Act of God'
- Using the incorrect form of current or voltage for charging.
- Using a non specified adapter or non complying USB-C plug.
- Improper maintenance or unauthorised repairs.
- Failure to adhere to all of the precautions in use outlined in this document's operating instructions.

Varia Brewing Limited will not be responsible for any material damage or personal injury resulting from failure to adhere to the AKU Electronic Scale Safety Operating Instructions detailed in this manual.

Please direct all warranty claims and enquiries to: [hello@variabrewing.com](mailto:hello@variabrewing.com)

**[www.variabrewing.com](http://www.variabrewing.com)**